



**There are channels that are not suitable for viewing for children. Hence, we recommend that you LOCK the channels of your Wave/Wavelet receiver by following the steps below.**

**TO LOCK THE CHANNELS:**

1. Press the **MENU** button on your remote control.
2. Select **Settings** and Press **Ok**.
3. Select **Preference** and Press **OK**.
4. Select **Parental Lock** and Press **OK**.
5. Input Password **0000**
6. Select the option Channel Lock as **ON**.
7. Select **New Channel Password** to set the New Password.
8. Go back to **Main Menu** and select Channel List and press **OK**.
9. Press **Yellow** Button on your Remote Control to **EDIT** Channels
10. Input password **0000**.
11. Select Block by Channel and Press **Yellow** Button to **Lock**.
12. Press **EXIT** to Save.

**TO UNLOCK THE CHANNELS:**

1. Press the **MENU** Button on your Remote Control.
2. Select **CHANNEL LIST** and press **OK**.
3. Press **Yellow** Button to Edit Channels.
4. Input Password **0000**.
5. Select the Lock Channels and Press Yellow to Unlock
6. Press **EXIT**.